

JM Micron Technology Corporation



JMicron One Touch Backup User Manual

JMicron Technology Corporation

1F, No. 13, Innovation Road 1, Science-Based Industrial Park,
Hsinchu, Taiwan 300, R.O.C.

Tel: 886-3-5797389

Fax: 886-3-5799566

Website: <http://www.jmicron.com>



Certificate No.: FM 84262

Copyright © 2015, JM micron Technology Corp. All Rights Reserved.

Printed in Taiwan 2015

JMicron and the JM micron Logo are trademarks of JM micron Technology Corporation in Taiwan and/or other countries.

Other company, product and service names may be trademarks or service marks of others.

All information contained in this document is subject to change without notice. The products described in this document are NOT intended for use implantation or other life supports application where malfunction may result in injury or death to persons. The information contained in this document does not affect or change JM micron's product specification or warranties. Nothing in this document shall operate as an express or implied license or environments, and is presented as an illustration. The results obtained in other operating environments may vary.

THE INFORMATION CONTAINED IN THIS DOCUMENT IS PROVIDED ON AN "AS IS" BASIS. In no event will JM micron be liable for damages arising directly or indirectly from any use of the information contained in this document.

For more information on JM micron products, please visit the JM micron web site at <http://www.JMicron.com> or send e-mail to sales@jmicron.com. For product application support, please send e-mail to fae@jmicron.com.

JMicron Technology Corporation

1F, No.13, Innovation Road 1, Science-Based Industrial Park, Hsinchu, Taiwan 300, R.O.C.

Tel: 886-3-5797389

Fax: 886-3-5799566

Table of Contents

Table of Contents	ii
1. Express installation.....	1
2. Application usage.....	5

1. Express installation


TIP: If you using portable version, please ignore this chapter.

1.1 Prepare install



Please copy installer file to local disk (Ex. C://User/Desktop/) to avoid data lost at installing.

1.2 Start install


Open JMicon One touch backup folder, and find “setup.exe”, please double-clicks it to start install wizard.

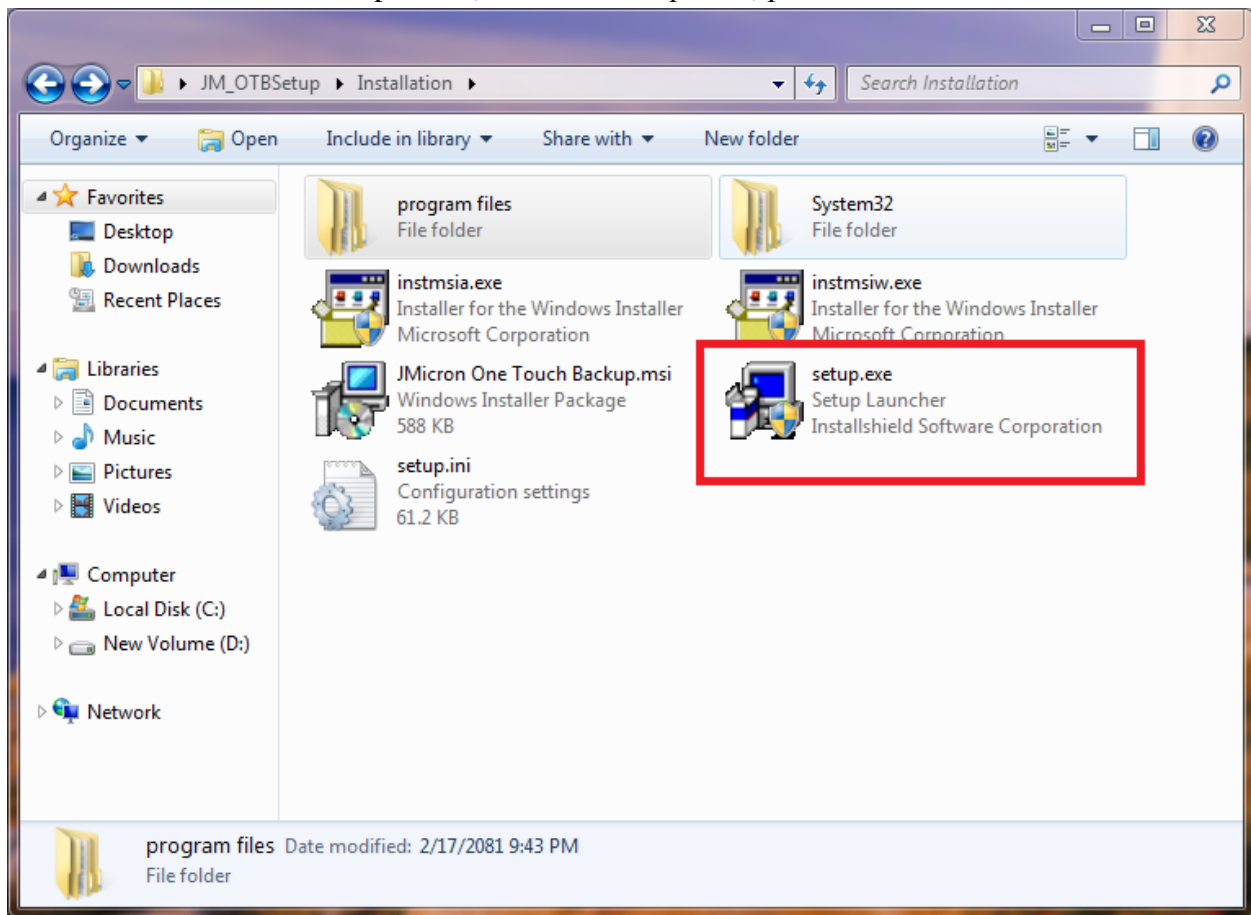


A welcome dialog appears, click **Next** to start installer,

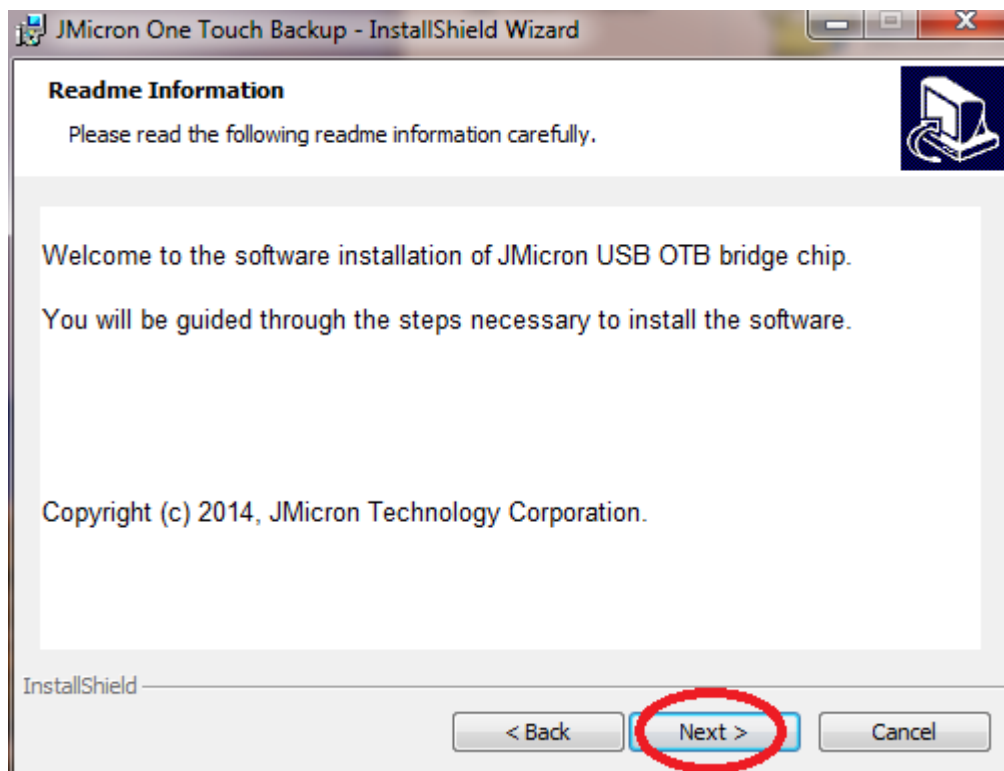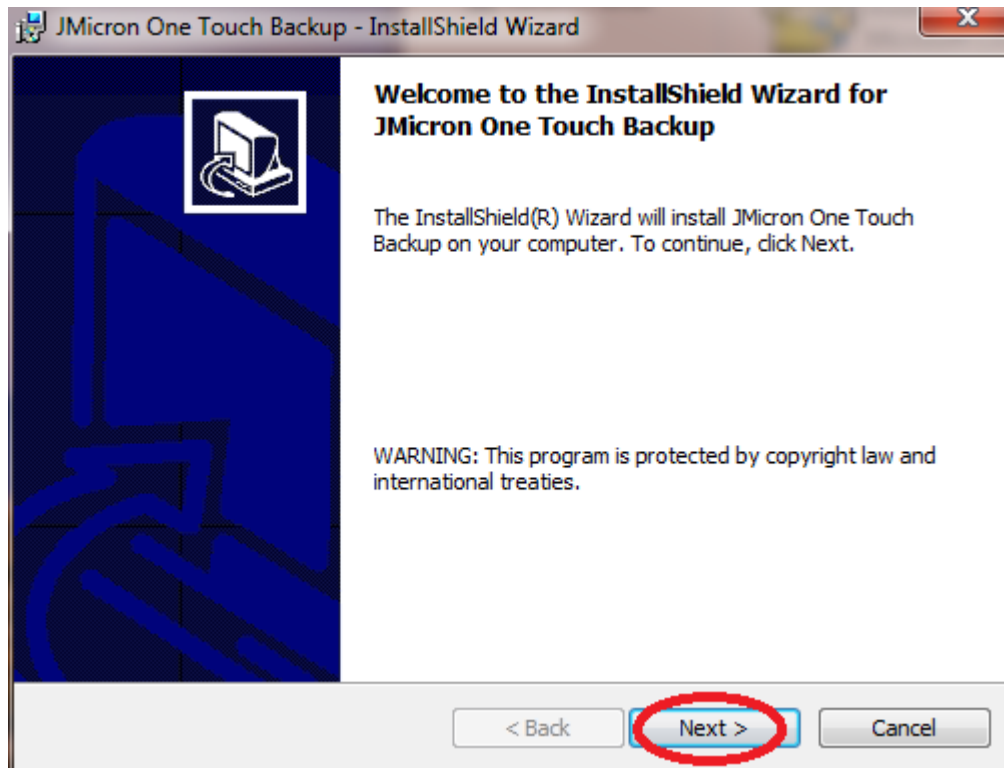


An information dialog appears, click **Next** to continue.

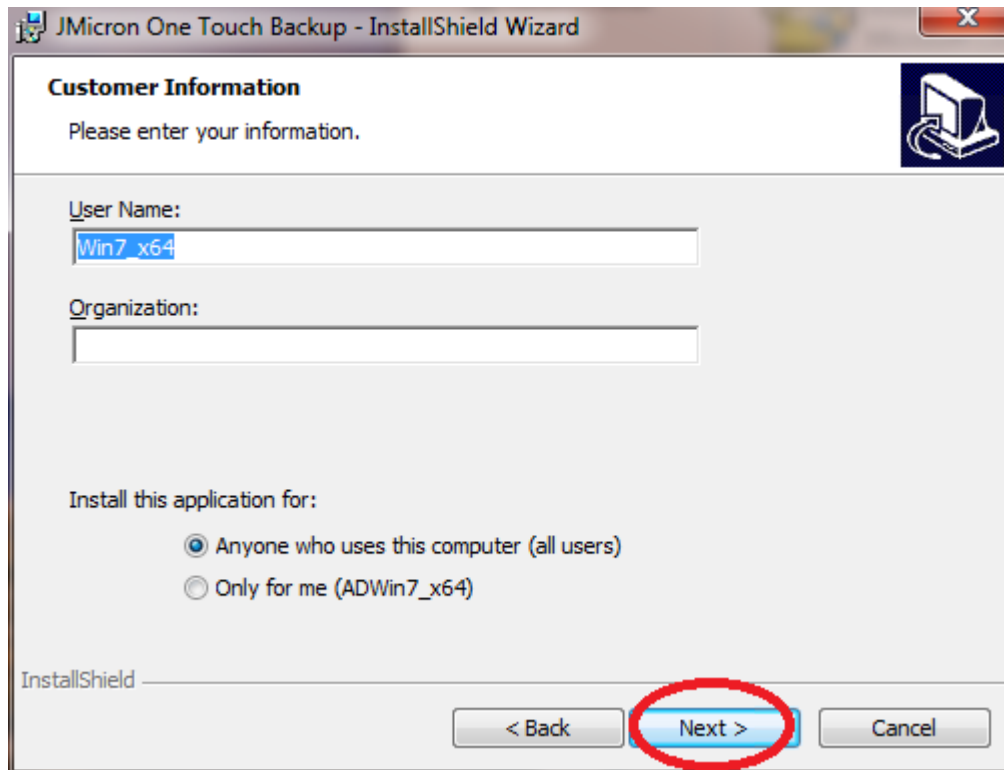


Select program install folder, click **Next** to continue.

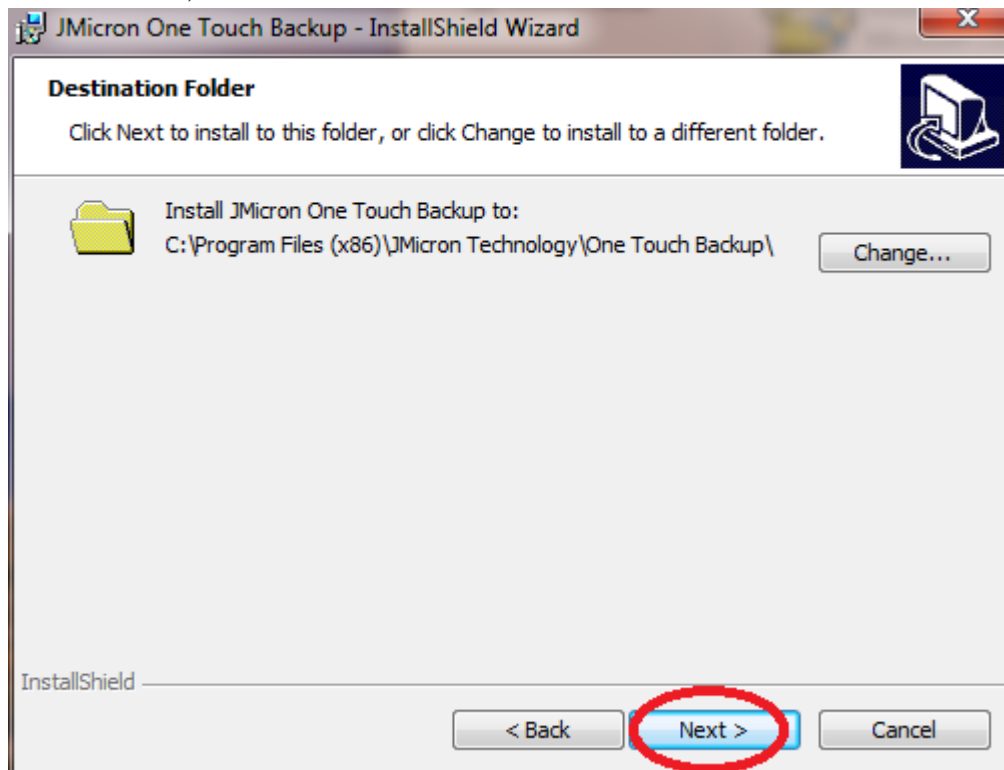

Check your installation settings, press **Install** to install.

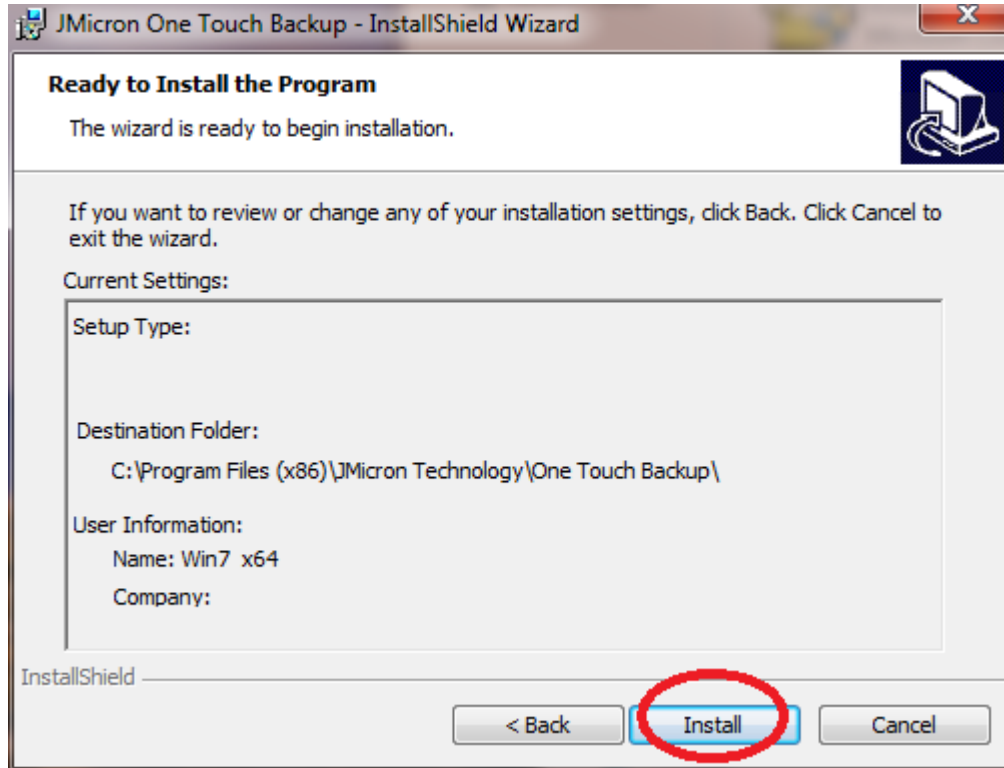

Finish installation. You can double-clicks JM_OTB () to start operate program on desktop.

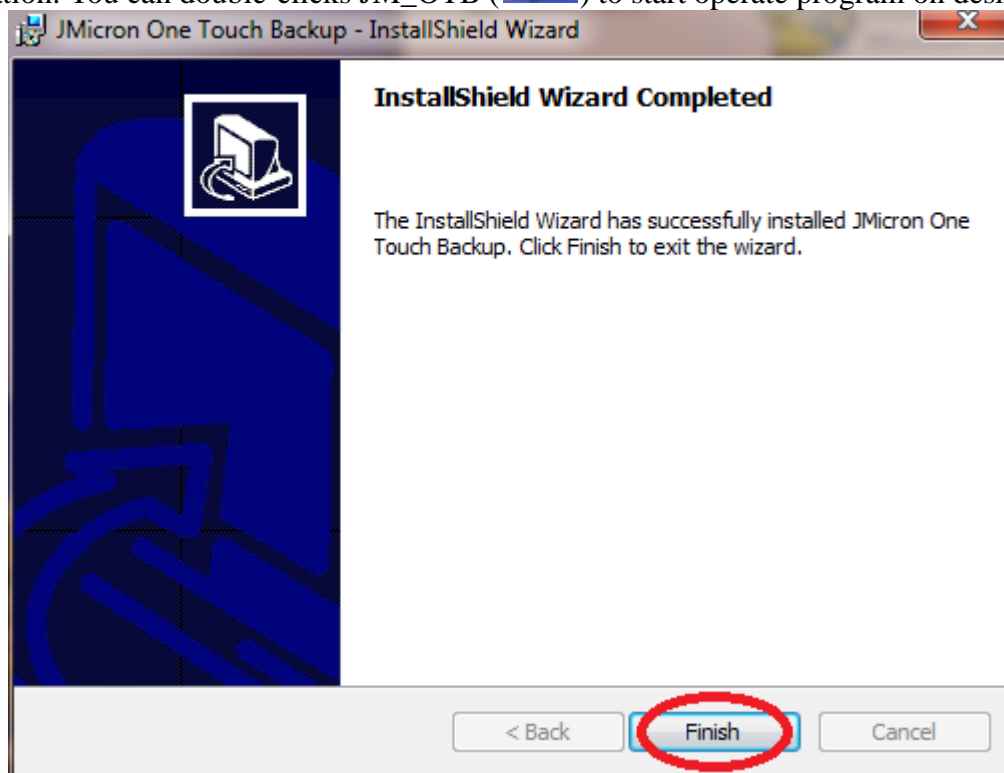


2. Application usage


2.1 File backup and restore

This chapter will show you how to use software to backup and restore data.


Plug-in an OTB device and it already Partition & Format. You will see disk letter at USB Device on software. Select a disk letter you want to use then next step.

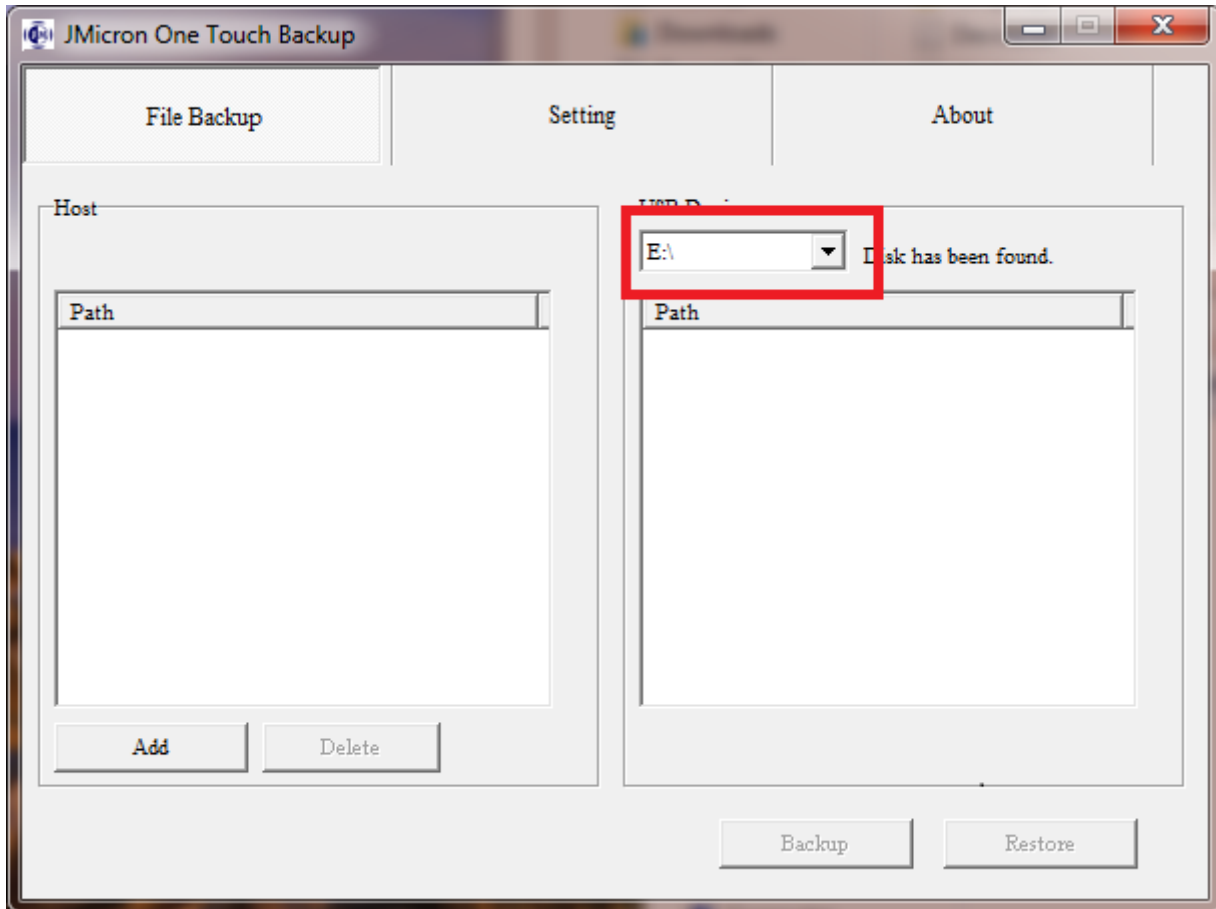


Click “**Add**” button to select a directory you want to backup. Then, click “**Backup**” button on software or device.

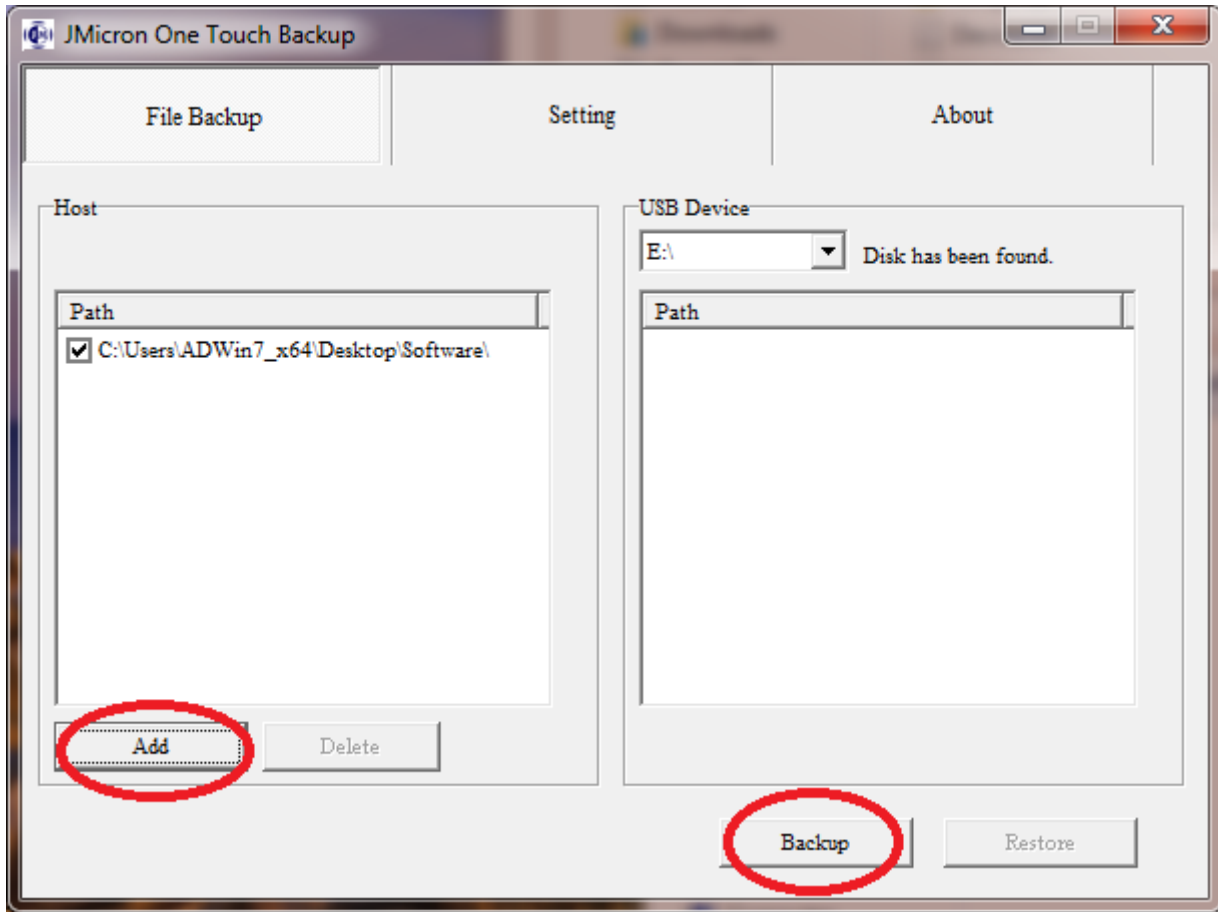


You can see the transfer information and progress rate after press “**Backup**” button.

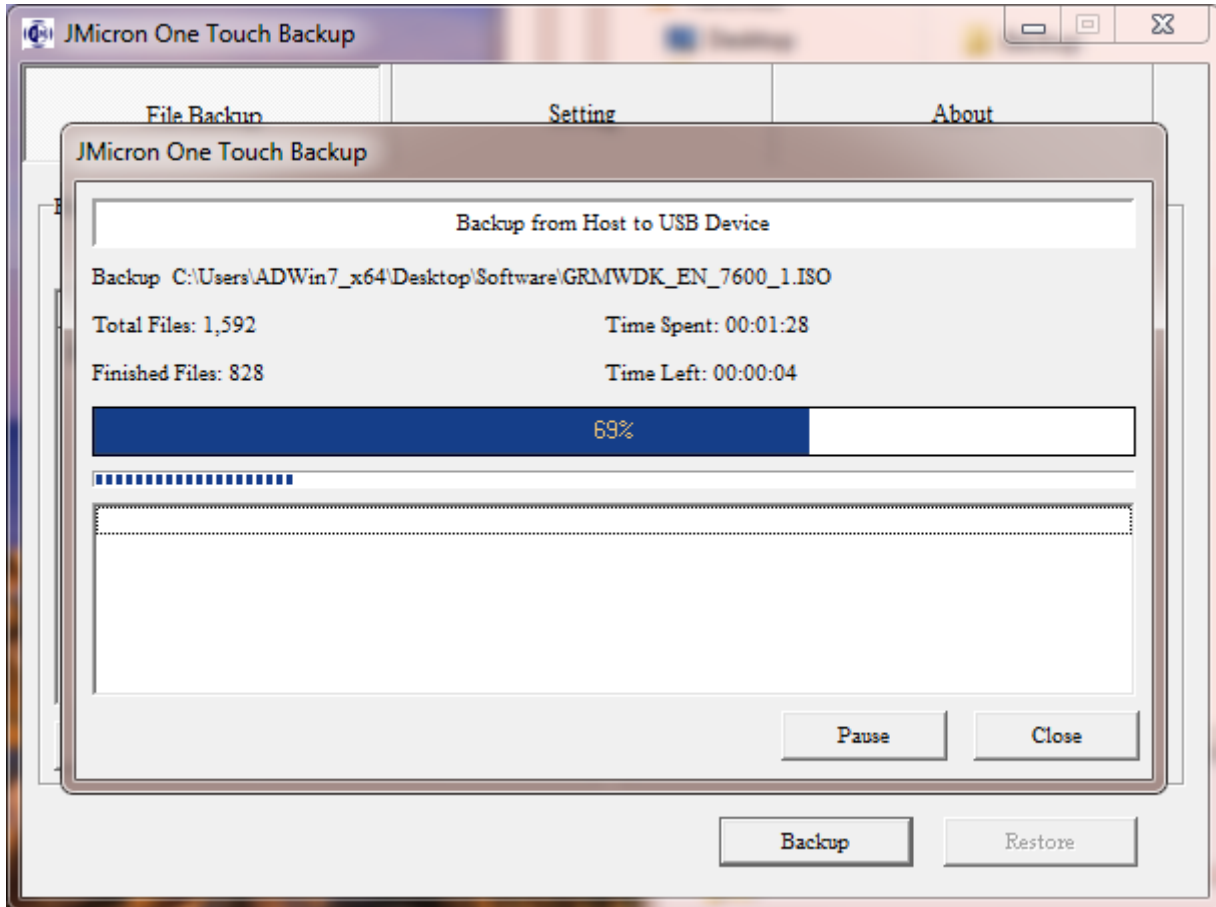


When backup finished, you can see a new item display at USB Device.

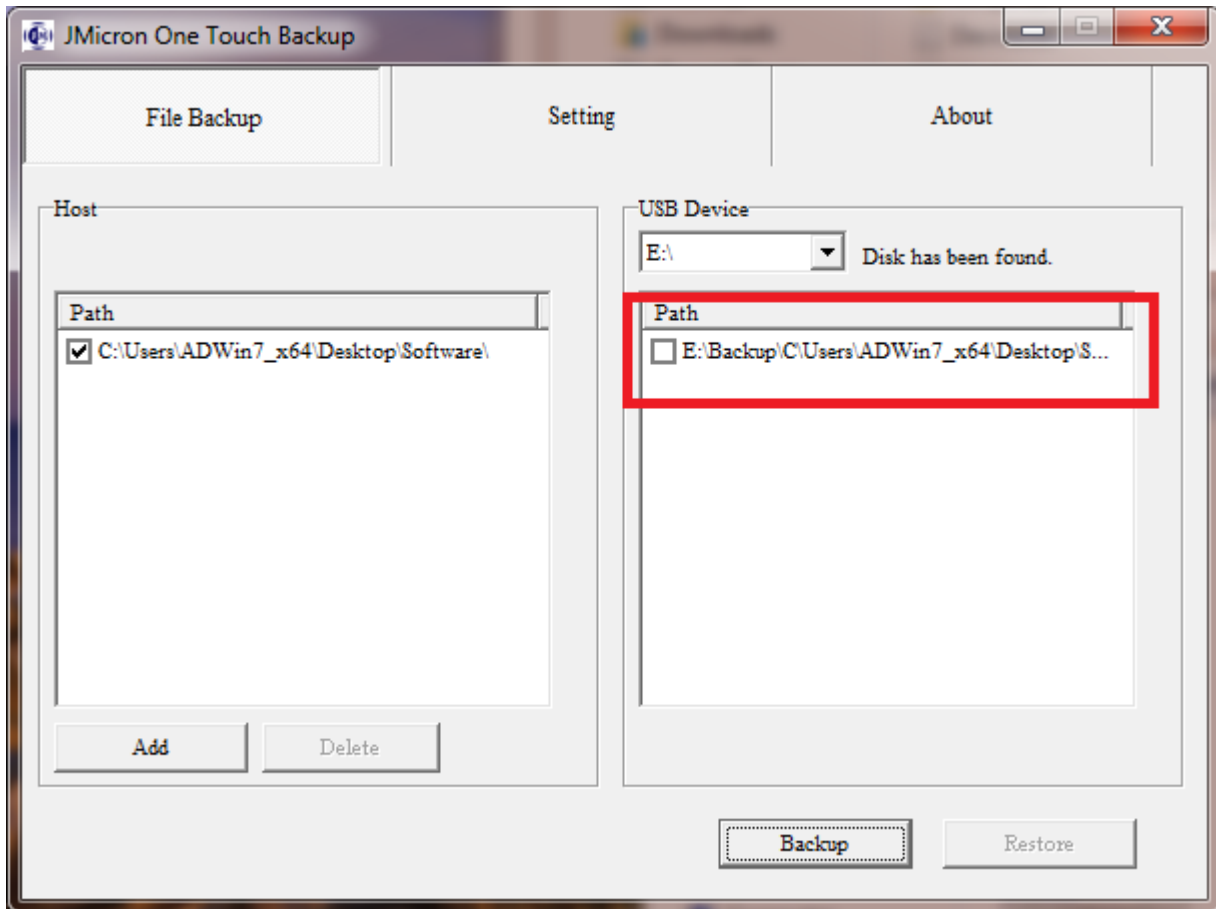


Now, we show you how to restore data to PC(Host). Select you want to restore items at USB Device on software. Then, press “**Restore**” to start restore.

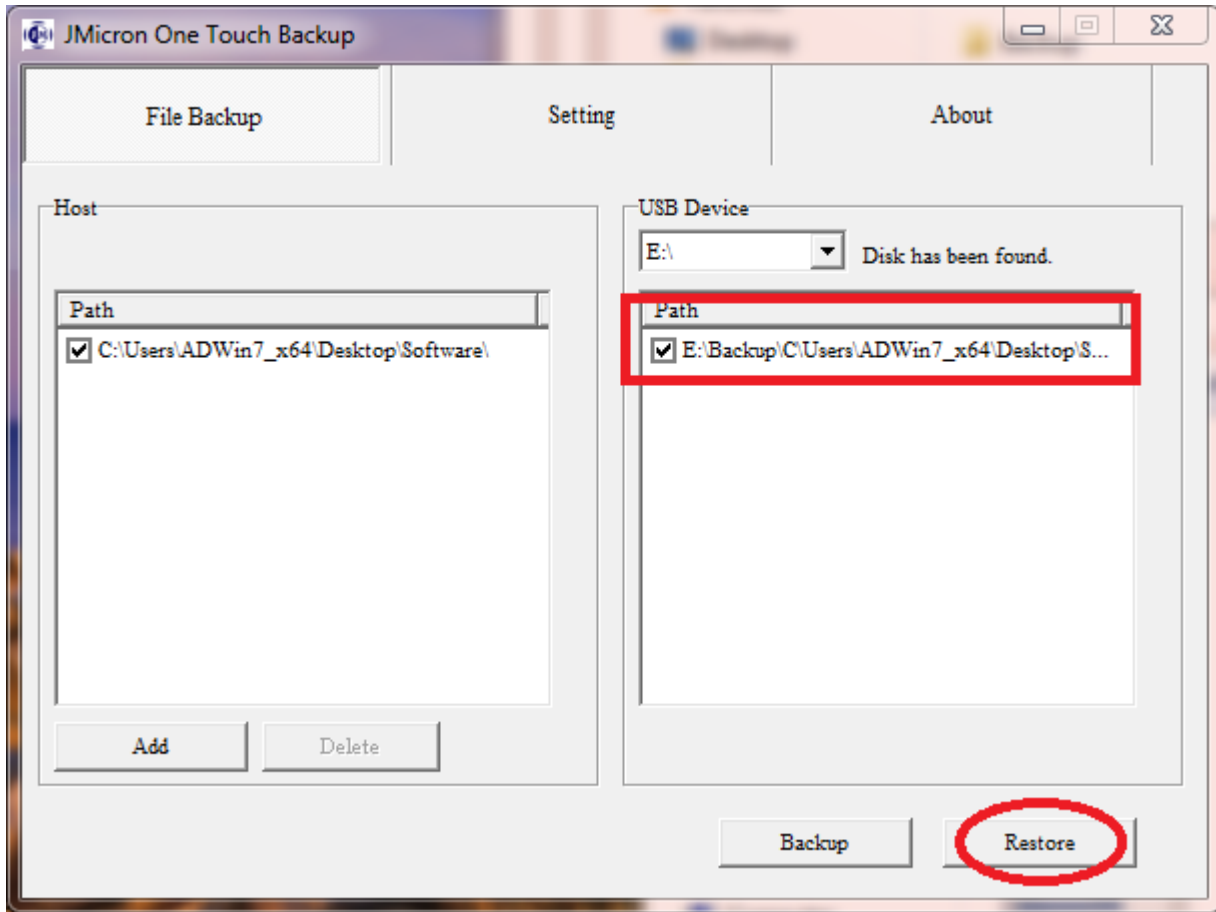

You can see the transfer information and progress rate the same with backup after press “**Restore**” button.

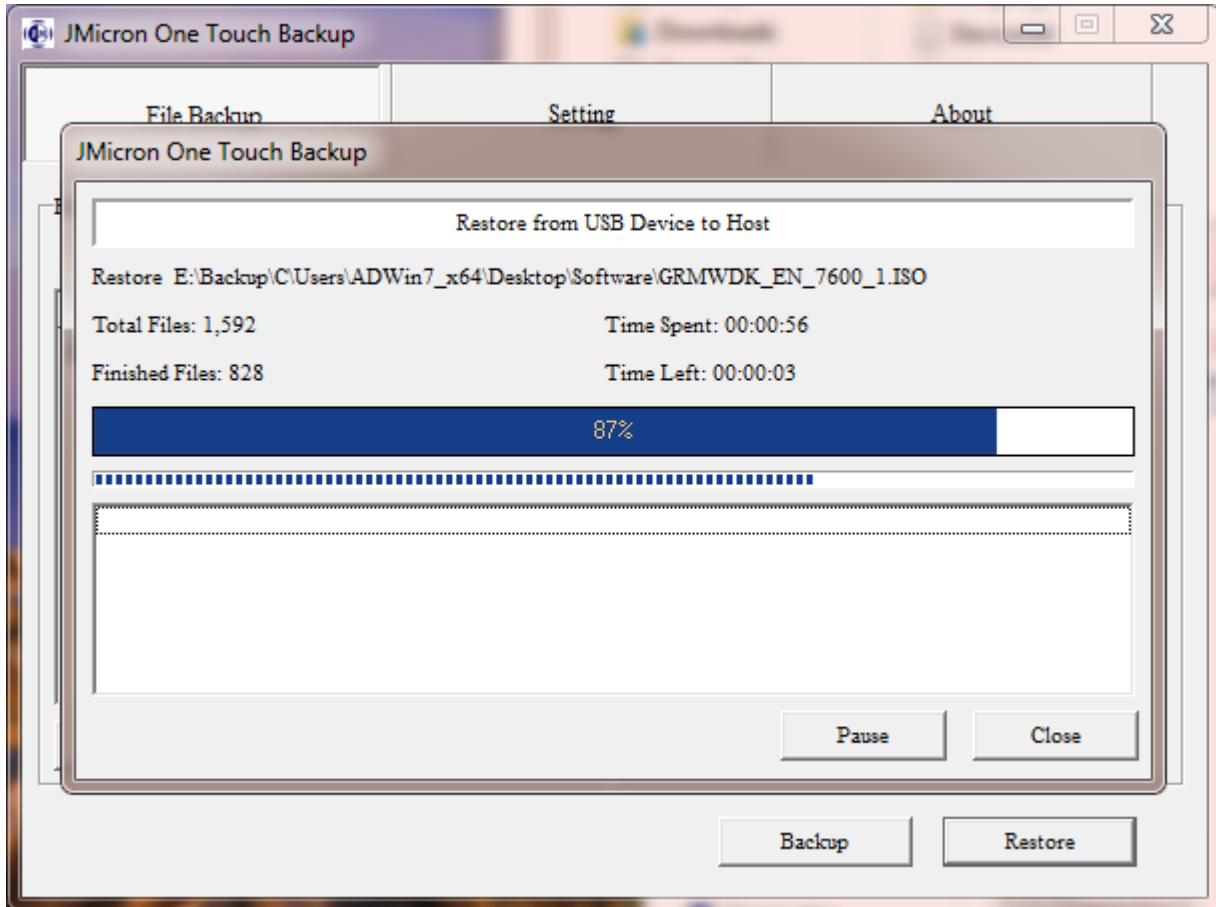

Backup folder in backup disk.

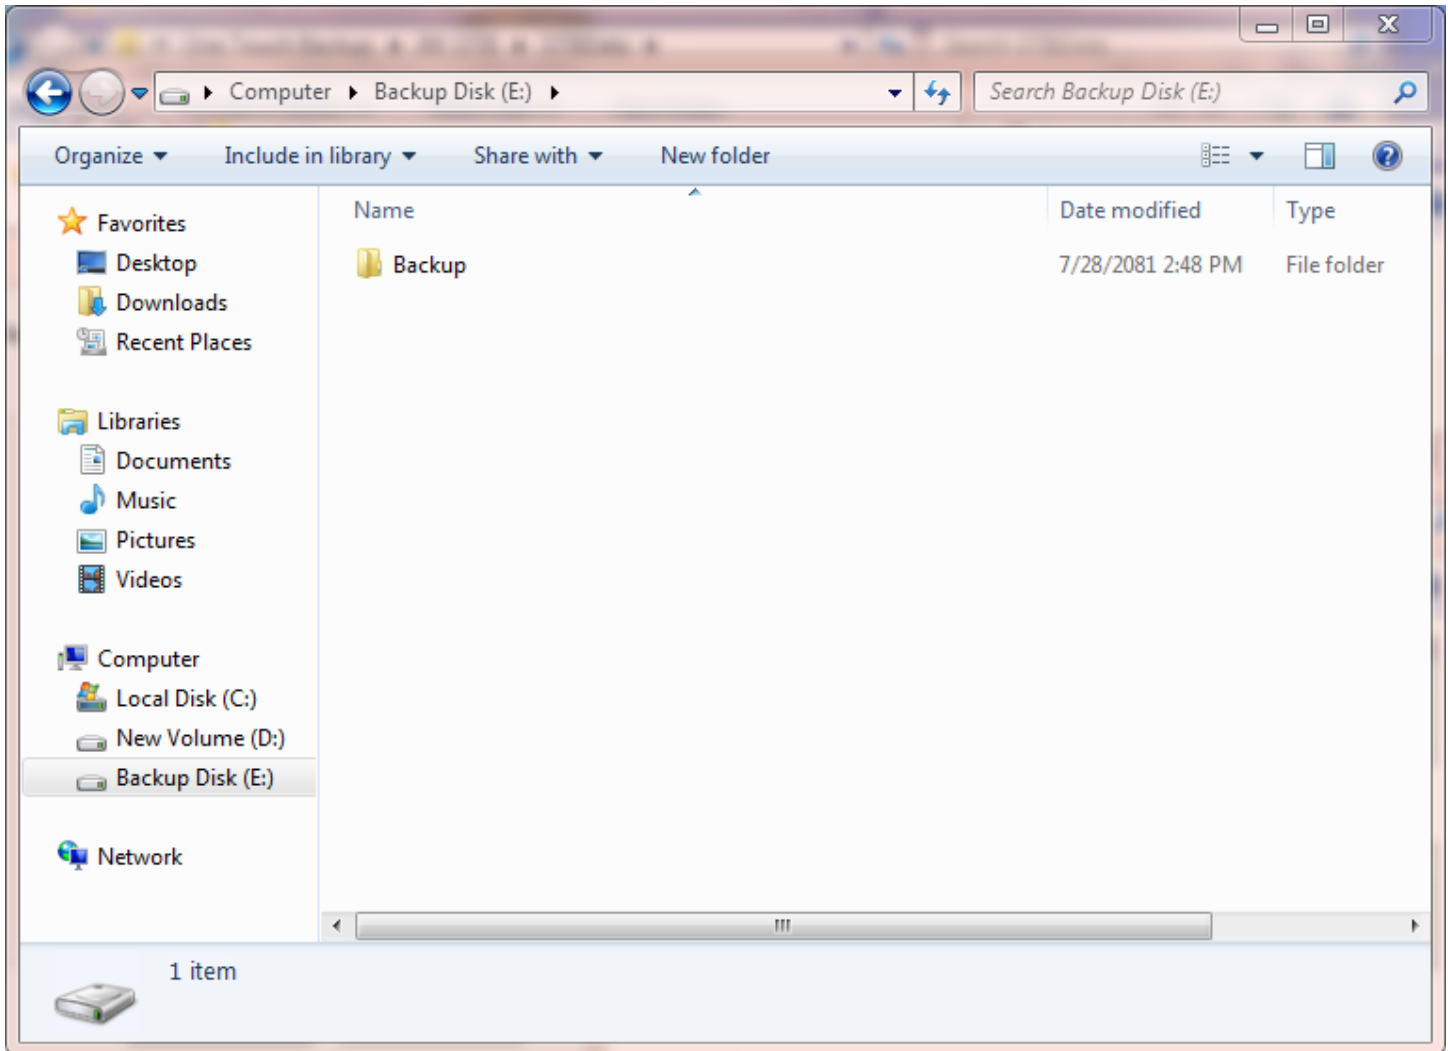


2.2 Setting


Backup File Type – select file type you want or not.

Language Type – select language.

English version

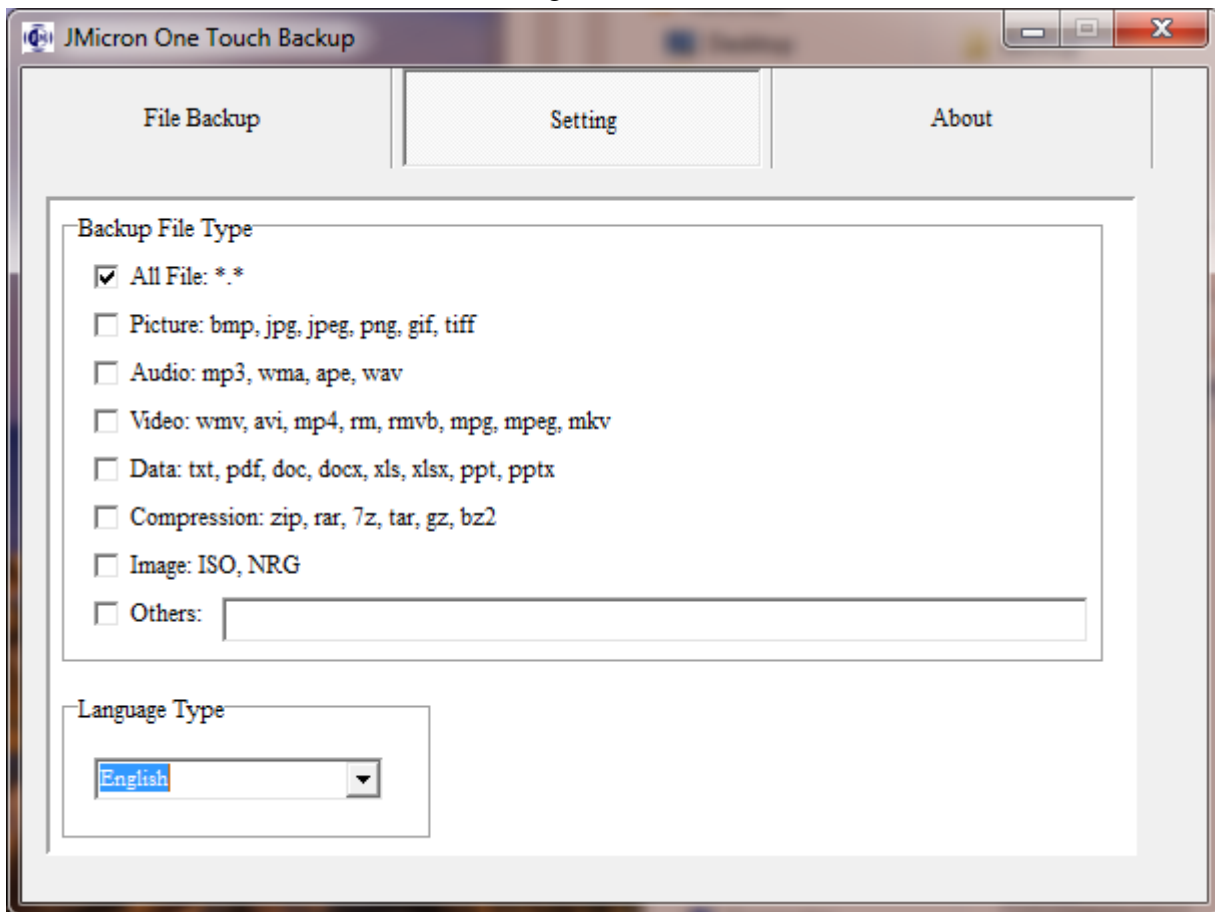


Traditional Chinese

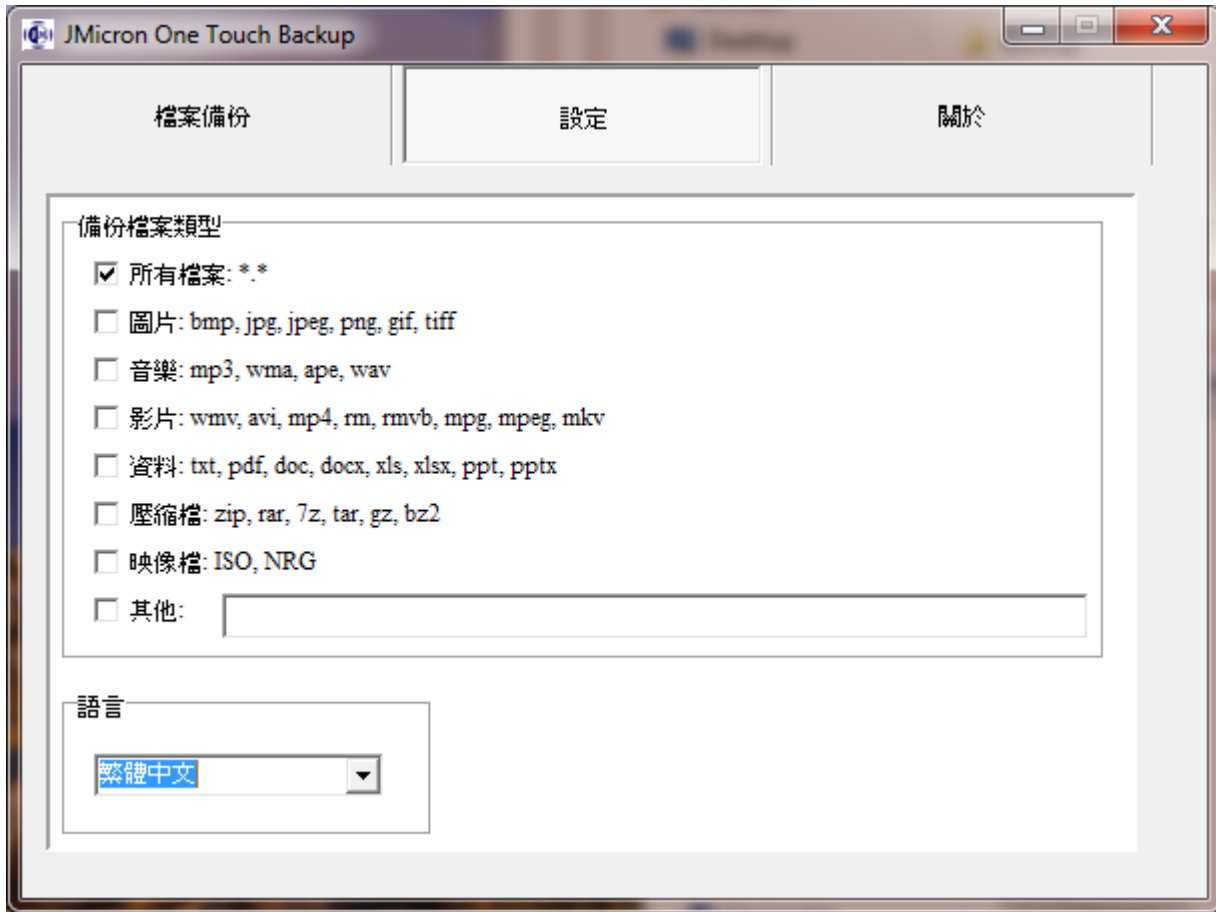

2.3 About

Show software information.

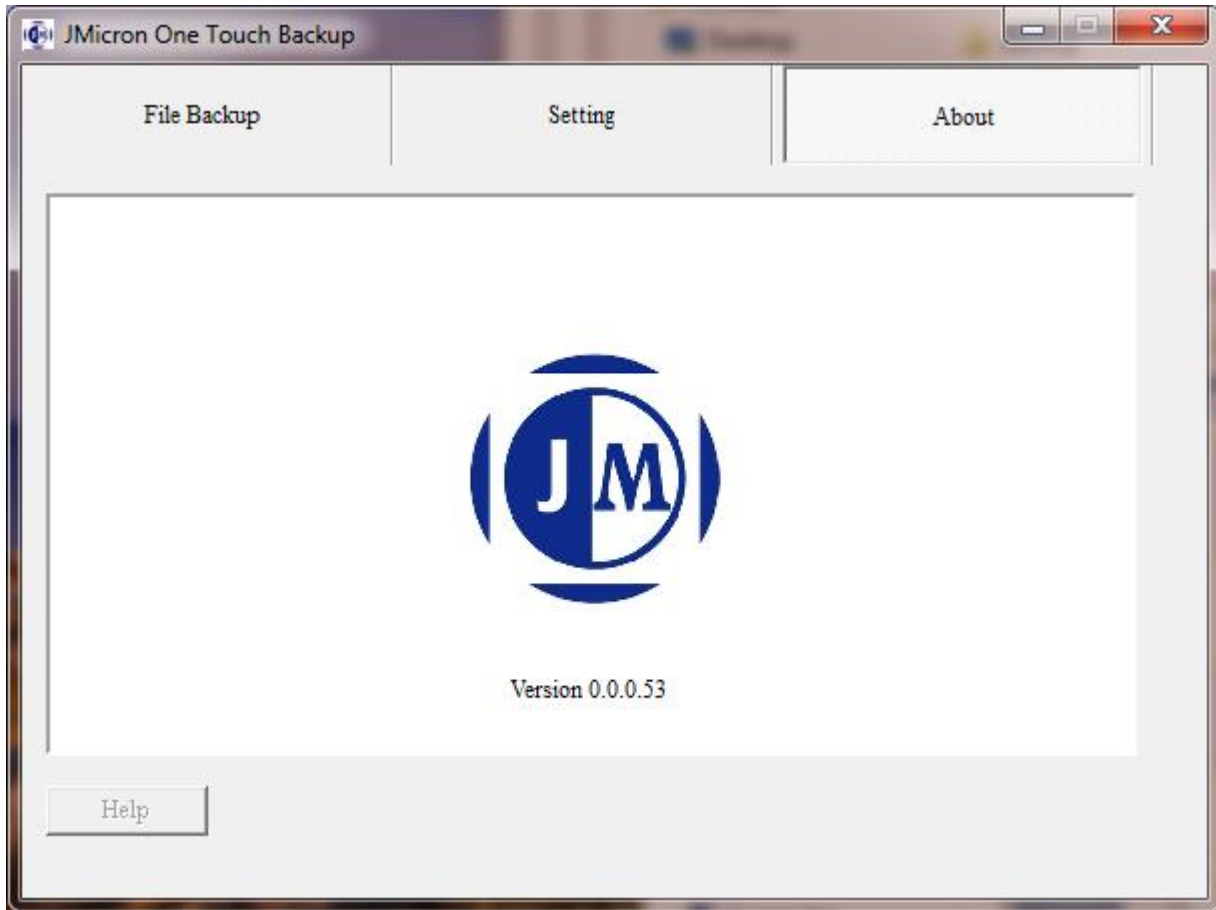

JMicron

Serial Link the World